Glass Corner Shelf Kit

(KT-0134-1212SN)

John Sterling Corporation

Installation Instructions

Tools Required (not included):
- 3/8" Drill
- 1/8" Drill Bit, or
- 3/16" Drill Bit
- Screwdriver
- Tape Measure
- Level

Installation Materials (included):
- 2 Shelf Grips
- 4 Screws
- 4 Anchors
- 2 Steel Flakes
- 12 x 12 x 1/4" Glass Corner Shelf

INSTALLATION:

STEP 1: Loosen the adjusting screw on the Shelf Grip until the inner hole appears, as shown in **Figure 1**. Repeat for the other Shelf Grip.

STEP 2: Measure the desired height for the corner shelf, and then measure 6" from the corner where the two walls intersect in order to mark the locations of the screw holes, as shown in **Figure 2.**

NOTE: If the screws are being driven directly into a stud, pre-drill the screw holes using a 1/8" drill bit, as shown in **Figure 3**. (Skip to **STEP 3**)

NOTE: If the screws are being driven into drywall and not into a stud, drill the screw holes using a 3/16" drill bit, and then insert the anchors into the holes as shown in **Figure 4.**

STEP 3: Place the Steel Flake on the back of the Shelf Grip, as shown in **Figure 5** (Grooves toward the Shelf Grip, to prevent slipping.)

STEP 4: Level the Shelf Grips, and then secure them in position by driving the screws into the anchors or the stud, as shown in **Figure 6.**

STEP 5: Insert the Glass Shelf between the Shelf Grips, and then tighten the adjusting screws, as shown in **Figure 7.**

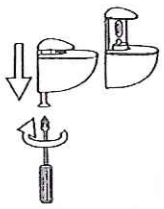

Figure 1

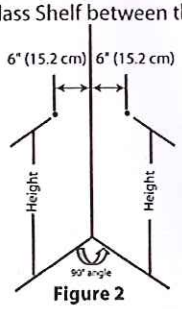

Figure 2

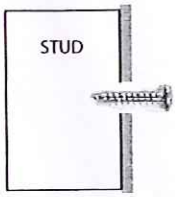

Figure 3

Figure 4

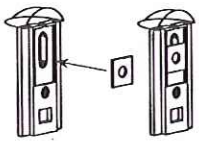

Figure 5

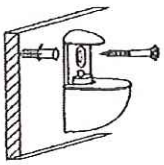

Figure 6

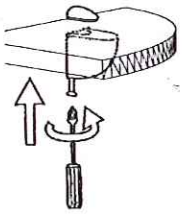

Figure 7